

get started

INSTANT POT® **VORTEX®**
5L AIR FRYER
USER MANUAL

Instant Pot®

Welcome

to your new Instant Pot® Vortex®!

This air fryer can help you cook delicious meals with less oil and less hassle. We hope you fall in love with Instant Pot air frying and enjoy it in your kitchen for years to come!



Scan to Get Started!

To make your cooking experience with Instant Pot as easy as possible, we have created 4 simple steps with how-to videos to guide you. Scan the QR code and follow the steps to become an Instant Chef in no time!



Download the **Instant Connect™ app** to access 3000+ recipe ideas.



Visit the **Instant Pot Brands UK YouTube channel** for useful product how-to videos.



Connect with the **Instant Pot UK Facebook Community**, and be inspired with cooking tips, tricks and recipes from this active group of Instant home chefs!

⚠️ WARNING

Before using your new appliance, read all instructions, including the Important Safeguards. **Failure to follow the safeguards and instructions may result in personal injury and/or property damage.**

CONTENTS

Important safeguards	2
What's in the box	7
Using your Vortex	8
Status messages	9
Initial set up	10
Air Fryer settings	12
Cooking	14
Smart Programs	17
Cleaning	18
Troubleshooting	20
Error Codes	21
Replacement Parts	22
Learn more	23
Warranty	24

IMPORTANT SAFEGUARDS

⚠ WARNING

Failure to follow safety instructions may result in personal injury and/or property damage and may void your warranty.

READ ALL INSTRUCTIONS

Before using your new appliance, please read all instructions, including the Safety Information below. Keep this manual for reference.

Placement

- **DO** place the appliance on a countertop only. Always operate the appliance on a stable, non-combustible, level surface.
- **DO** make sure all parts are dry and free of food debris before use.
- **DO** use extreme caution when moving the appliance. Always let the appliance cool to room temperature before handling or moving.
- **DO NOT** place the appliance on butcher block, other wood surfaces, Formica, laminate or other combustible surfaces.
- **DO NOT** place the appliance or power cord on or close to a gas or electric stovetop or oven. **NEVER** use the appliance on your stove.
- **DO NOT** use the appliance near water, an external heat source or flame.
- **DO NOT** use outdoors. Keep out of direct sunlight.
- **DO NOT** place on anything that may block the vents on the appliance.
- **DO NOT** move the appliance if it contains hot oil or other hot liquids.

General Use

- **DO** use the appliance's handles when opening the door/basket.
- **DO** use oven mitts when removing accessories and handling hot items.
- **DO** place hot accessories on a heat-resistant surface or cooking plate.
- **DO NOT** touch the appliance's hot surfaces, or any accessories during or immediately after cooking because they will be hot.

⚠ WARNING

- **DO NOT** cover the basket, cooking tray or any part of the appliance with foil. This will cause overheating of the appliance, which may result in personal injury, fire, and/or property damage.
- **DO NOT** move the appliance while it is in use.
- **DO NOT** allow children or persons with reduced physical, sensory or mental capabilities to operate this appliance. Close supervision is necessary when any appliance is used by or near children and persons with reduced physical, sensory or mental capabilities. Children should not play with this appliance.
- **DO NOT** use the appliance for anything other than household use. It is not intended for commercial use.
- **DO NOT** leave the appliance unattended while in use.
- **DO NOT** use the appliance for more than 60 minutes in a 2-hour period.

Air Frying Cautions

When the air fryer is in operation, hot air is released through the air vents. Keep your hands and face away from the air vents and take extreme caution when removing hot accessories from the appliance.

Failure to do so may result in personal injury and/or property damage.

While cooking, the internal temperature of the appliance reaches several hundred degrees. To avoid personal injury, **NEVER** place unprotected hands inside the appliance until it has cooled to room temperature.

- **DO** use caution when using cooking containers made of materials other than metal or glass. Failure to do so may result in personal injury, fire and/or property damage.
- **DO** use extreme caution when removing the basket/cooking tray or disposing of hot cooking residue.
- **DO NOT** use a ceramic-coated or stoneware pot for air frying.
- **DO NOT** cover or block the vents while the air fryer is operating. Doing so will prevent even cooking and may cause damage to the appliance. Leave at least 13 cm of space around the air fryer when in use.
- **DO NOT** operate the appliance on or near combustible materials such as tablecloths and curtains.
- **DO NOT** use this appliance for deep frying foods.

⚠ WARNING

- **DO NOT** pour oil into the cooking container. Using excess cooking oil could cause fire and result in personal injury and/or property damage.
- **DO NOT** use pressurised, aerosol oil sprays, since they contain chemicals that can damage the non-stick finish of the cooking tray. If needed, spray food lightly with oil with a high smoke point (such as refined avocado oil, refined sunflower oil, refined peanut oil, canola oil and refined coconut oil) from a non-aerosol, pump-style cooking spray before placing in the basket.
- **DO NOT** use this appliance for making popcorn.
- Should the unit emit black smoke during use, press **Cancel** and unplug the appliance immediately. Wait for smoking to stop before removing the lid, then clean thoroughly. For further information refer to 'Troubleshooting'.

Overfill During Air Frying

- **DO NOT** overfill the unit when air frying. Overfilling may cause food to contact the heating element, which may result in personal injury, fire, and/or property damage. When using an air fry tray or cooking tray, only place food in a single layer and do not stack. When using an air fry basket, do not fill more than 3/4 full. Best air frying results require air circulating through the food.
- **DO NOT** allow food to contact the heating element.

Accessories

- **DO** use only accessories or attachments authorised by Instant Pot Brands. The use of parts, accessories or attachments not recommended by the manufacturer may cause a risk of electric shock or other personal injury, fire and/or property damage.
- **DO NOT** use the included accessories in a microwave, toaster oven, convection or conventional oven, on a ceramic, electric or gas cooktop, or with an outdoor grill.

Care and Storage

- **DO** let the appliance cool to room temperature before cleaning or storage.
- **DO NOT** store any materials in the appliance when not in use.
- **DO NOT** place any combustible materials in the appliance, such as paper, cardboard, plastic, Styrofoam or wood.

⚠ WARNING

- **DO NOT** clean the appliance with metal scouring pads or steel wool. Pieces can break off and touch the electrical parts, causing a risk of shock, burns or other personal injury.

Power Cord

A short power-supply cord is used to reduce the risk resulting from grabbing, entanglement or tripping. **WARNING:** Hot spilled food can cause serious burns.

This appliance has a 3-prong earthed plug. To reduce the risk of electric shock:

- **ONLY** plug the power cord into an earthed electrical outlet.
- **DO NOT** remove EARTH.
- **DO NOT** use with extension cords, power converters or adapters, timer switches or separate remote-control systems.
- **DO** keep appliance and cord away from children.
- **DO** disconnect the power cord from the electrical outlet when not using the appliance and before cleaning.
- **DO NOT** let the power cord hang over edge of tables or counters.
- **DO NOT** let the power cord touch hot surfaces or open flame, including the stovetop.
- **DO NOT** use below-counter power outlets.

Electrical Cautions

The appliance contains electrical components that are an electrical shock hazard. **Failure to follow these instructions may result in electric shock and/or death.**

To protect against electrical shock:

- To disconnect, select **Cancel**, then remove plug from power source. Always unplug when not in use, as well as before adding or removing parts or accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet. **NEVER** pull from the power cord.
- **DO** regularly inspect the appliance and power cord for any signs of damage or fraying.
- **DO NOT** operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care by email at **UKSupport@instantpot.com** (if located in the UK) and **EUSupport@instantpot.com** (if located in the EU).

⚠ WARNING

- **DO NOT** attempt to dislodge food while the appliance is plugged in to an electrical outlet as this may lead to electric shock, burns or other personal injury, and/or property damage.
- **DO NOT** attempt to repair, replace or modify components of the appliance, as this may cause electric shock or other personal injury, fire and/or property damage, and will void the warranty. For assistance, contact Customer Care by email at **UKSupport@instantpot.com** (if located in the UK) and **EUSupport@instantpot.com** (if located in the EU)
- **DO NOT** tamper with any of the safety mechanisms, as this may result in personal injury and/or property damage.
- **DO NOT** immerse power cord, plug or the appliance in water or other liquid.
- **DO NOT** clean the appliance by rinsing it under a faucet.
- **DO NOT** use the appliance in electrical systems other than 220-240 V ~ 50/60 Hz

 
SAVE THESE INSTRUCTIONS

⚠ WARNING


Failure to follow safety instructions may result in personal injury and/or property damage and may void your warranty.

WHAT'S IN THE BOX

Air Fryer

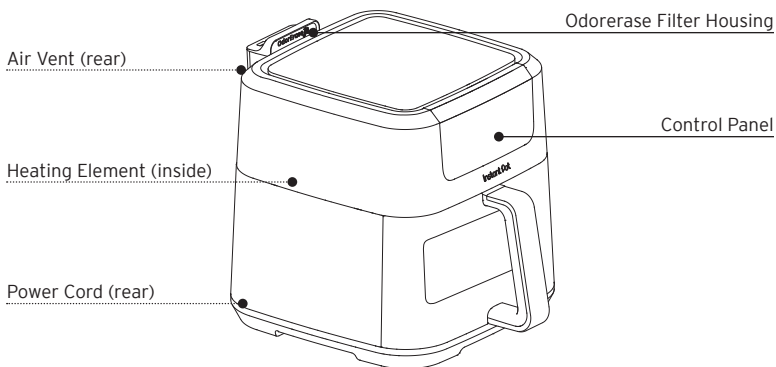

Parts + accessories

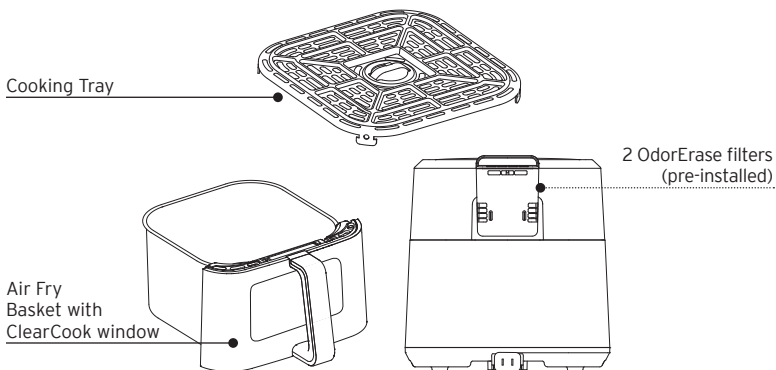 

Illustrations are for reference only and may differ from the actual product.

 
Remember to recycle!

We designed this packaging with sustainability in mind. Please recycle everything that can be recycled where you live. Be sure to keep this user manual for reference.

USING YOUR VORTEX

Control panel

We've designed the control panel to be simple to use and easy to read.

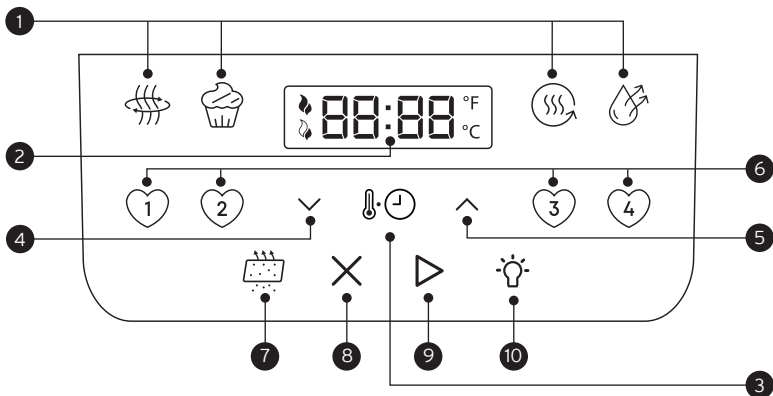

1. Smart Programs
 - Air Fry
 - Bake
 - Reheat
 - Dehydrate
2. Status display
 - Cooking time
 - Cooking temperature
 - Temperature scale
 - Messages
 - Error codes
3. Temp/Time
4. Decrease settings
5. Increase settings
6. Favorites
7. Replace Filter
8. Cancel
9. Start
10. Light

STATUS MESSAGES

The status display shows helpful information when using your Instant Vortex.

OFF	Unit is Ready to begin
On	Unit is preheating
Add Food	Unit has reached the selected cooking temperature and you can add food
Turn Food	Your food is ready to be turned
End	Smart Program has ended
OPEN	Air Fry Basket is removed
SET 2	Favorite program has been set <i>This example is for Favorite 2; the number of the selected Favorite will display</i>
Not SET	Favorite program has not been set

INITIAL SET UP

Unpack

1. Remove your new air fryer from the box.
2. Remove all the packaging material from in and around the air fryer.
3. Make sure to remove all the accessories from inside the oven chamber.
4. Don't remove the safety warning stickers or the rating label from the air fryer.

Clean before use

1. Wipe the interior with a damp cloth. Use a clean, soft cloth to dry.
2. Wash the accessories with hot water and dish soap. Rinse with warm, clear water and use a soft cloth to dry.

Placement

1. Place your air fryer on a stable, level surface, away from combustible material and external heat sources. Do not place your air fryer on top of another appliance.
2. Make sure to leave at least 13 cm of space above and around all sides of the appliance to allow for sufficient air flow.









Connect to power

When you're ready to use your air fryer, plug the power cord into an electrical outlet. When you're done cooking and whenever you're cleaning the air fryer, unplug the cord from the outlet.

Test run

Before using your new air fryer for the first time, you should perform a test run to ensure the unit is working properly.

To perform a test run:

1. Plug the air fryer into an electrical outlet. The display shows **OFF**.
2. Insert the Air Fry Basket, but do not add food.
3. Press **Air Fry** .
4. Press  and use **Increase**  or **Decrease**  to adjust the cooking temperature to 205°C.
5. Press  and use **Increase**  or **Decrease**  to adjust the cooking time to 18 minutes.
6. Press **Start** .
7. When the display shows **Add Food**, wait 10 seconds for the program to automatically resume (do not add any food).
8. When the display shows **Turn Food**, wait 10 seconds for the program to automatically resume.
9. After the cooking session is done, let the unit cool.

Now you're ready to cook a meal in your Instant Pot Air Fryer!

AIR FRYER SETTINGS

Favourites


You can set and save up to 4 cooking settings as Favourites for one-touch access to recipes.

Saving Favourites

1. Select any Smart program and set it up according to your recipe.
2. When you're happy with the settings, press any Favourites key for 3 seconds to save the program. Your customised program is ready to use any time you want.



You can replace a saved Favourites with a new recipe by repeating these steps again.

Using Favourites

1. Press the Favourites key you want to use.
2. Press **Start**  to begin. The display shows the settings you've saved.

*If you press a Favourite key that hasn't been saved as a Favourite, the display flashes **Not Set** 3 times and returns to the previous screen.*




Turning cooking light On/Off

- To turn the light on, press **Light** .
- To turn the light off, press **Light**  again.

The cooking light cannot be turned off in the last 60 seconds of a cooking program

Turning sound On/Off




You can set status notification sounds to ON or OFF.

- While the display shows **OFF** or a Smart Program is in process, press and hold   and  for 5 seconds until the display shows either **SOff** or **S On**.

Audible safety alerts (beeps) cannot be turned off.

Choosing temperature unit

You can display cooking temperature in either Fahrenheit or Celsius.

- While the display shows **OFF** or a Smart Program is in process, press and hold   and  for 5 seconds until display shows either **Unit °F** or **Unit °C**.

Reset Smart Programs to original settings


Each time you use a Smart Program, the temperature and time settings you choose are memorised. These become the default settings the next time you select the program. You can reset them to the original settings, either for a specific Smart Program or for all for all Smart Programs.

Reset individual Smart Programs

- While the display shows **OFF**, press and hold the Smart Program button you want to change for 3 seconds until the Smart Program button flashes twice.
- While a Smart Program is in process, press and hold the Smart Program button you want to change for 3 seconds until the display shows the original cooking settings.

The Smart Program's cooking times and temperatures are restored to the factory default setting.


Reset all Smart Programs

- While the display shows **OFF**, press and hold   for 3 seconds until all Smart Program buttons flash three times.

All Smart Program cooking times and temperatures are restored to the factory default setting.

Cancel cooking

You can cancel an active Smart Program at any time.

- While setting up a Smart Program, during preheating or while cooking, press **Cancel** . Depending on the internal temperature of the unit, the fan may keep running to cool the cooker.

Replace filter indicator

When it's time to replace the OdorErase filter, the **Replace Filter** light will blink. See page 19 for instructions on how to replace the filter.

COOKING

Your Instant Pot Vortex uses rapid air circulation to crisp or cook food, giving your meals all the rich, crispy flavor of deep frying, with little to no oil.

⚠️ WARNING

HOT SURFACES

The air fryer chamber will be hot during and after cooking. Always exercise extreme caution when removing food from the hot air frying basket and cooking chamber. Touching hot surfaces may result in personal injury, and/or property damage.

MUST ALLOW AIR FLOW

To prevent personal injury, do not block air intake or air vents.

What to cook in

Air Fry Basket with Cooking Tray

The Cooking Tray allows air to circulate under and around your food for even heating and the perfect crisp. We recommend using it for most foods, but especially foods you want to crisp, like fries and cauliflower bites. You can cook larger foods or special recipes directly on the Air Fry Basket.

Baking Dish inside Air Fry Basket

For the Baking program only, you can use a metal or glass baking dish to hold foods, like batter for cakes and dough for breads. Place the baking dish inside the air fry basket, leaving approximately 2.5 cm of space around all sides of the baking dish to allow heat to circulate evenly.

Tips

- You can place food right on the Cooking Tray or Air Fry Basket, without using foil or other coverings.
- When the Air Fry Basket is inserted securely, the front of the basket is flush with the front of the cooker.

How to cook

Prep

Cut, chop, season, marinate or batter your ingredients according to your recipe.



Cook



1. For the Dehydrate and Reheat programs, place your food in the Air Fry Basket and insert the basket into the air fryer.
2. For the Air Fry and Bake programs, insert the Air Fry Basket (without food) into the air fryer.




You'll add food once the unit is preheated.



3. Press the button for the Smart Program you want to use.

See Smart Program settings on page 17.

4. Press  and use **Increase**  or **Decrease**  to adjust the cooking temperature.

*You can adjust the temperature at any time by pressing  and increasing or decreasing the temp, then pressing **Start** .*

5. Press  and use **Increase**  or **Decrease**  to adjust the cooking time.

*You can adjust the time at any time by pressing  and increasing or decreasing the time, then pressing **Start** .*

6. Press **Start**  to begin.

Add food

For the Air Fry and Bake programs:

1. When the unit is preheated, the Message Bar shows **Add Food**.
2. Remove the basket and carefully add your food into the basket.

Use care when removing the basket and setting it on the counter, as it will be hot. Hold the basket by the handle and do not touch the walls of the basket when adding food.

3. Reinsert the basket into the cooker. The cooking countdown timer starts.

Turn Food

For the Air Fry program:

1. Part way through the cooking cycle the Message Bar shows **Turn Food**.
*If you do not remove the basket after **Turn Food** displays, cooking will proceed after 10 seconds.*
2. Remove the basket and carefully turn, flip, or rotate your food.
3. Reinsert the basket into the cooker. Cooking continues.

Finish

When the Smart Program completes, the air fryer beeps and the Message Bar shows **End**.

The air fryer beeps once a minute for 10 minutes to remind you that cooking has completed.

SMART PROGRAMS

Air Fry

You can air fry foods like fries, cauliflower bites, wings, nuggets and more.

Bake

You can bake foods like breads, cakes, chicken breasts or potatoes, instead of heating up your regular oven.

Reheat

Bring the crisp and crunch back to leftover fries and pizza in just a few minutes.

Dehydrate

Dehydrating uses low heat over a long period of time to safely dry out food items, like dried fruit, jerky and dried veggies.

Program settings

You can use the default settings to get started, and adjust time and temperature for specific recipes.

Program	Default Temp	Temp Range	Default Time	Time Range	Preheat	Turn Food
Air Fry	205°C	65°C - 205°C	15 min (00:15)	1 min - 1 hr (00:01 - 01:00)	Yes	Yes
Bake	176°C	40°C - 205°C	25 min (00:25)	1 min - 1 hr (00:01 - 01:00)	Yes	No
Reheat	138°C	49°C - 182°C	10 min (00:10)	1 min - 1 hr (00:01 - 01:00)	No	No
Dehydrate	51°C	40°C - 74°C	7 hr (07:00)	1 hr - 70 hr (01:00 - 70:00)	No	No

CLEANING

Clean your air fryer after each use. Always unplug the unit and let all parts cool to room temperature before cleaning. Before use or storing, make sure all surfaces are dry.

⚠ WARNING

To prevent electric shock, unplug before cleaning. **DO NOT** immerse power cord, plug or the appliance in water or other liquid, which may result in electric shock.


Part	Cleaning instructions
Cooking Tray Air Fry Basket	<ul style="list-style-type: none">• Dishwasher safe.*• Avoid using metal utensils and harsh cleaners when cleaning to avoid damaging the non-stick coating.• Allow the basket to air dry completely before reinstalling, otherwise the glass may experience clouding.
Cooking chamber	<ul style="list-style-type: none">• Clean with a damp cloth and mild dish soap.• Always check the heating coil and cooking chamber walls for oil spatter and food debris, and clean as needed.• Ensure the heating coil is dry before turning on the air fryer.• To remove baked-on grease and food residue from the cooking chamber, spray with a mixture of baking soda and vinegar and wipe clean with damp cloth. For stubborn stains, allow the mixture to sit on the affected area for several minutes before scrubbing clean.
Power cord	<ul style="list-style-type: none">• Use a barely-damp cloth to wipe any particles off cord.

** Some discoloration may occur after machine washing, but this will not affect the cooker's safety or performance.*


Replacing OdorErase filter

Visit instantpot.co.uk to purchase compatible filters, designed to work with your unit.

 
1. Unplug the air fryer from the electrical outlet.
2. Lift the filter housing up, from the top of the unit.

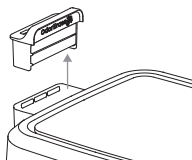

 
3. Remove the old filter and dispose of it properly. The filter is not recyclable.



 
4. Remove the new filter from its packaging and insert it into the filter housing.



 5. Insert the filter housing back into the unit and plug the cooker pack into the electrical outlet.

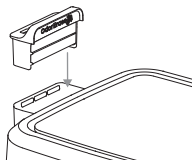

6. Press and hold **Replace Filter**  for 3 seconds to reset the filter indicator.
7. The OdorErase filter will automatically begin removing odors and oil residue while you cook.

TROUBLESHOOTING

Problem	Cause	Solution
Air fryer will not turn on	The appliance is not properly plugged in.	Make sure the power cord is plugged into the outlet firmly.
	Outlet is not powered.	Plug another appliance into the same outlet to test the circuit.
	The basket is not fully inserted into the air fryer.	Make sure the basket is fully inserted.
Black smoke is coming from the air fryer	Using an oil with a low smoke point.	Cancel the Smart Program, unplug the cooker and allow it to cool to room temperature. Choose a neutral oil with a high smoke point.
	Food residue on the heating coil, in the cooking chamber or on the accessories.	Cancel the Smart Program, unplug the cooker and allow it to cool to room temperature. Remove all accessories from the cooking chamber and clean the cooking chamber and all accessories thoroughly.
	Appliance malfunction.	Contact Consumer Care.
White smoke is coming from the air fryer	Cooking foods with a high fat content, such as bacon, sausage, and hamburger	Avoid air frying foods with a high fat content. Check the cooking chamber for excess oil and/or fat and carefully remove as needed before air frying.
	Water is vaporising, producing thick steam.	Pat dry moist food ingredients before air frying. Do not add water or other liquid to the cooking chamber when air frying.
	Seasoning on food has blown into element	Be mindful when seasoning food. Spray vegetables and meats with oil before seasoning to help the seasoning stick.



ERROR CODES

If the control panel displays an error code from this list, there is an issue with the air fryer. Here are the actions you should take to fix the problem.

Problem	Cause	Solution
E1	Temperature sensor open circuit.	Contact Consumer Care.
E2	Temperature sensor short circuit.	Contact Consumer Care.

REPLACEMENT PARTS

We offer genuine replacement parts for your Instant Pot air fryer, if you need them. Visit www.instantpot.co.uk to order.

	Part	Part number
	Air Fry Basket with Clear Cook Window	210-1595-01
	Cooking Tray	210-1795-01
	OdorErase Filter Replacement 8-pk	210-1170-01-EMEA

LEARN MORE

There's a whole world of Instant Pot® cooking information and help just waiting for you. Here are some of the most helpful resources.

Register your product

instantpot.co.uk/product-registration

Contact Consumer Care

instantpot.co.uk/support

UKSupport@instantpot.com

EUSupport@instantpot.com

+44 (0) 3331 230051

Download the Instant Connect™ App

Discover guided cooking and recipes

Available at iOS and Android app stores

Cooking charts and more recipes

instantpot.co.uk/get-cooking

How-to videos, tips and more

instantpot.co.uk/getting-started

Replacement parts and accessories

instantpot.co.uk/product-category/instant

Join the community



Product specifications

Model	Volume	Wattage	Power
INAFB53-BK	5 Litres	1500 W	220-240V~50/60 Hz
INAFB53-TE	5 Litres	1500 W	220-240V~50/60 Hz

WARRANTY

Instant Brands (EMEA) Limited, Instant Pot Brands (Ireland) Limited, and Instant Pot Brands LLC (collectively the “Company”) warrant this appliance to be free from defects in workmanship and material, under normal household use, for a period of one (1) year from the date of original purchase. This Limited Warranty extends only to the original purchaser and use of the appliance in the UK and EU. This warranty does not cover appliance use outside of the UK and EU. Proof of original purchase date and, if requested, return of your appliance is required to obtain service under this Limited Warranty. Provided that this appliance is operated and maintained in accordance with the written instructions included with the appliance (which are also available at instantpot.co.uk), the Company will, at its sole discretion, either: (i) repair defects in materials and workmanship; or (ii) replace the appliance. In the event the appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase. The Company is not responsible for shipping costs for warranty service.

Limitation and Exclusions

Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and may result in serious injury and damage. Any modification or attempted modification to your appliance or any part thereof will void the warranty, unless such modification(s) or alteration(s) were expressly authorised by the Company.

This warranty does not cover (1) normal wear and tear; (2) damage resulting from negligent, unreasonable or misuse of the appliance, improper assembly or disassembly, use contrary to the operating instructions, failure to provide reasonable and necessary maintenance, Acts of God (such as fire, flood, hurricanes and tornadoes), or repair or alteration by anyone, unless expressly directed and authorised by the Company; and (3) repairs where your appliance is used for other than normal household use and in a manner contrary to published user or operator instructions.

To the extent permitted by applicable law, the liability of the Company, if any, for any allegedly defective appliance or part shall be limited to repair or replacement of the appliance or part thereof, and shall not exceed the purchase price of a comparable replacement appliance. Except as expressly provided herein and to the extent permitted by law, (1) the Company makes no warranties, conditions or representations, express or implied, usage, custom of trade or otherwise with respect to the appliance or parts covered by this warranty and (2) the Company shall not be responsible or liable for indirect, incidental or consequential damages arising out of or in connection with the use or performance of the appliance or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of any nature or kind.

You may have rights and remedies under applicable laws, which are in addition to any right or remedy which may be available under this limited warranty.

Please visit instantpot.co.uk/product-registration to register your appliance. You will be asked to provide your name, your email address, the store name, date of purchase, model number and serial number (both of which are found on the appliance). This registration will enable us to keep you up-to-date with product developments and recipes, and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understood the instructions for use and warnings accompanying the appliance.

WARRANTY SERVICE

To obtain warranty service, please contact our Customer Care Department by creating a support ticket online at instantpot.co.uk/contact-us. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Instant Pot Brands is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.

Within the UK:

Instant Brands (EMEA) Limited,
Floor 6, Block C, Dukes Court,
Duke Street, Woking,
GU21 5BH, UK
Email: UKSupport@instantpot.com
Telephone: +44 (0) 3331 230051

Within the EU:

Instant Brands (Ireland) Limited,
Suite 6, Rineanna House, Shannon Free Zone,
Shannon, Co Clare, Ireland,
V14 CA36
Email: EUSupport@instantpot.com
Telephone: +44 (0) 3331 230051

This warranty was last updated on 1 September 2019 for all products sold from [1 November 2019]. If your product comes with our older warranty version, your warranty will continue to be honoured.

Recycling

This appliance complies with the WEEE Directive 2012/19/EU on the disposal of electrical and electronic equipment (WEEE). This appliance complies with the European directive for electromagnetic compatibility (EMC) 2014/30/EU and its revisions, as well as Low Voltage Directive (LVD) 2014/35/EU and its revisions. This marking indicates that this product should not be disposed of with other household waste throughout the UK and EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable re-use of material sources. To return your used device, please use the return and collection systems or contact Customer Care for further recycling and WEEE information.



⚠ WARNING

DO NOT place this appliance on or close to a gas or electric burner, or inside an oven. **NEVER** use on your stove. Always operate this appliance on a stable, non-combustible, level surface, such as a kitchen countertop.



Instant Brands (EMEA) Limited
Floor 6, Block C, Dukes Court,
Duke Street, Woking, GU21 5BH, UK

Instant Brands (Ireland) Limited
Suite 6, Rineanna House, Shannon
Free Zone, Shannon, Co Clare,
Ireland, V14 CA36

instantpot.com

© 2025 Instant Pot Brands

INSTANT POT and VORTEX
are registered trademarks
of Instant Pot Brands